

Flower Trimmer Operating Instruction

1 Remove the top from the flower trimmer's base



Remove the top from the flower trimmer's base. The inside of the top contains the high-density rubber tongues that are used to push the plant leaves into the blade grill. The cutting blades or wires are located below the grill.

2 Place the untrimmed plants on the grill

Place the untrimmed plants on top of the grill. The plants should be many to make sure the grill surface is covered (approximately 40 dry grams).



3 Place the top on the flower trimmer base



Place the top back on the trimmer's base. There is no need of handle in this step for electric trimming.

4 Connect the electric adaptor and turn on

Connect the electric adaptor and push the on/off button on the base of the trimmer. Then the inside rubber tongues will twist and multiplies the rate of the spinning plants and blades by over 30 times on round. Adjust the speed frequency by turning the knob. Turn further right, faster.



5 Remove the top and collect the plants

A combination of the rubber tongues presses and rolls the plants into the spinning blades can improve the cutting efficiency.



Open the top and the trimmed plants and their fragmental bud/leaves can be found individually on the middle grill and in the trimmer basin.

Depending on the type of plants, the trimming can be used for the preparation of plants' essential oils.

6 Repeat the process for more harvest

If you think the leave pieces are not small enough, keep repeating the above process as many times as you want, or until you have completed your harvest. When finished, easy clean every part of the trimmer and store it.



7 Refer to Step 1 when trim manually



If you want to trim plants manually, first refer to Step 1, remove the trimmer top. Attention: take out the CONNECTOR. Next refer to Step 2 and 3. Handle is a must, so place the handle on the top. Then turn the handle clockwise to make 15-30 complete rounds. Only 30 seconds can yield one hour's work. Finally you can refer to Step 5 and 6.

WARNINGS:

- ◆ Never place your fingers, gloves or any other body part in contact with the grill or the blade.
- ◆ Do not use scissors, knives or any instrument above the grill.

Please Note:

The manufacturer does not accept any responsibility for damages caused to or by the trimmers resulting from an inadequate use or assembly. Please use the trimmers in accordance with existing laws and regulations.

Flower Trimmer Operating Instruction

Leaf Trimmer Assembly Diagram

